



SMOKE DETECTOR INSTALLATION

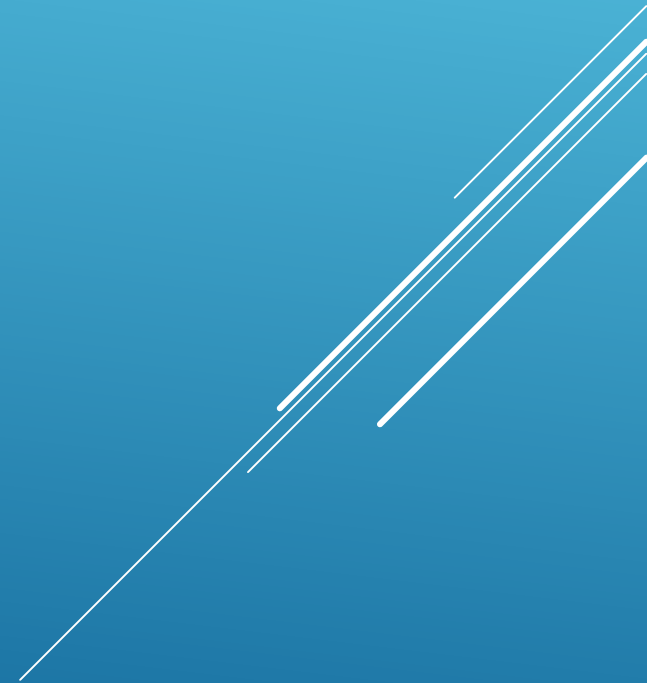

- A detector will need to go in each bedroom of the residence.
 - A detector will also need to be placed in a centralized location in relation to the bedrooms, such as a hallway.
 - If you have a multi-story house we want to place the central detector at the top of the stairs.
- 
- A decorative graphic consisting of several parallel white lines of varying lengths, slanted upwards from left to right, located in the bottom right corner of the slide.



PLACEMENT OF DETECTORS

The first option for a detector in the bedroom is to place it above the door between 4 and 12 inches from the ceiling.



PLACEMENT OF DETECTORS

If there is not enough headspace above the door, the next option is to move on either side of the door staying within the 4 to 12 inches from the ceiling.

You may also place the detector on the ceiling above the door.

When placing the centrally located detector, we want to look at placing it on the ceiling in the middle of a hallway.

We can also place it on the wall toward the middle of the hallway, still keeping in mind the 4-12 inches from the ceiling, if that is a better option.

If for some reason the best centralized location is close to a kitchen, we want to make sure that the detector is at least 10 feet away from the kitchen.



INSTALLATION

STEP 1


Place the bracket on the wall or ceiling where you want to mount the alarm.



INSTALLATION

STEP 2


Hold the mounting bracket against the ceiling (or wall) and trace around the inside of the two keyhole slots.

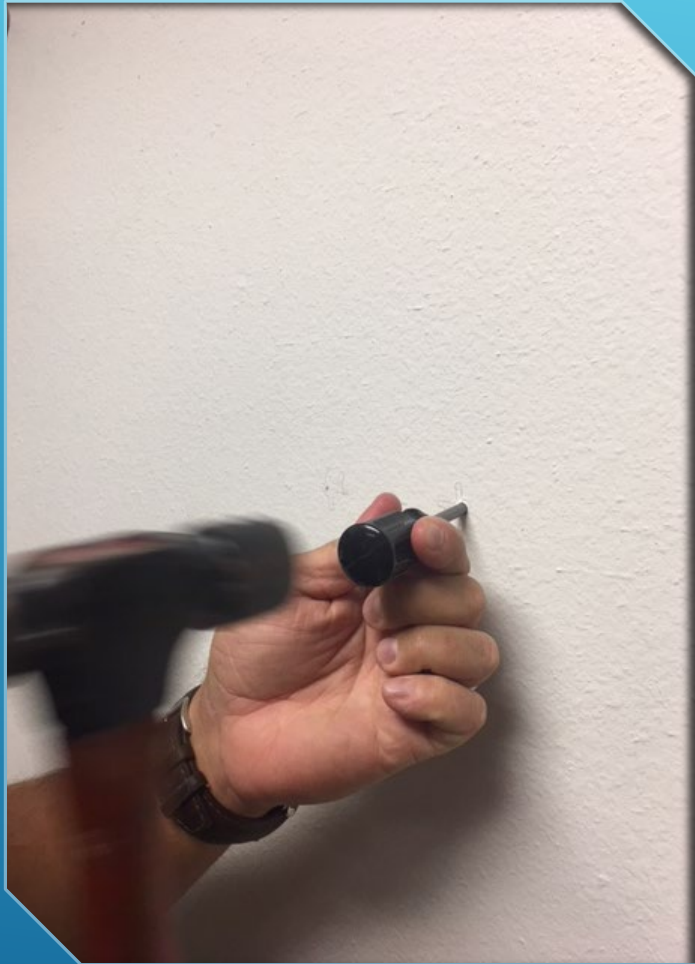

INSTALLATION

STEP 3

Make a mark inside each outline for the drill holes. Using a 3/16-inch drill bit, drill a hole through each pencil mark. An awl will work as well.

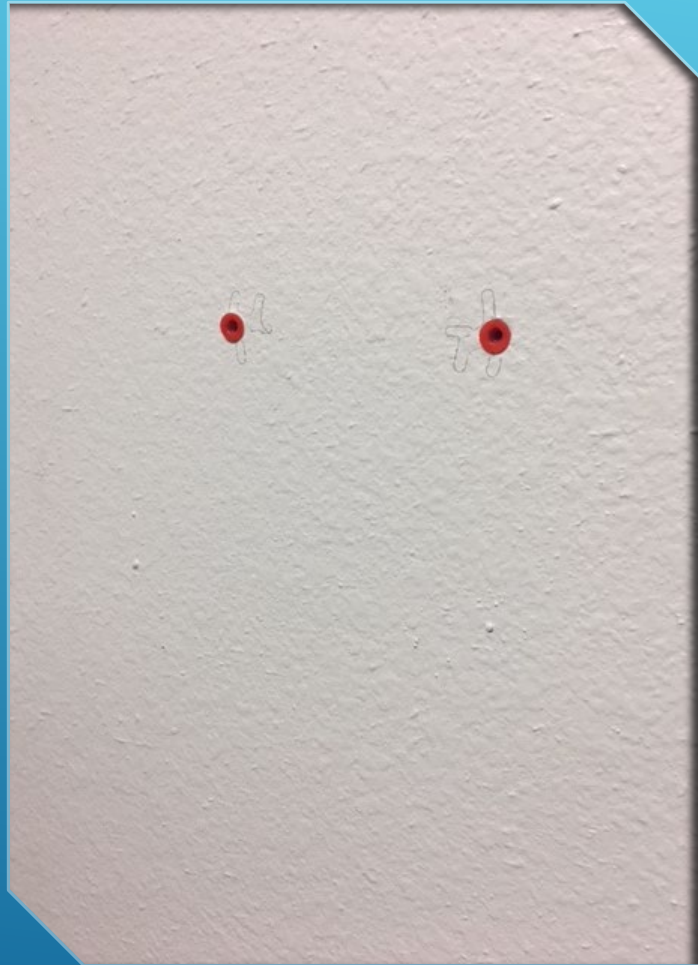

INSTALLATION

Step 4


Insert the plastic screw anchors into the holes. Tap the screw anchors gently with a hammer, if necessary, until they are flush with the ceiling or wall.



INSTALLATION

STEP 5

Line the mounting bracket up over the plastic screw anchors. Screw the mounting bracket to the ceiling or wall through the mounting slots using the two screws provided and tighten both screws all the way.

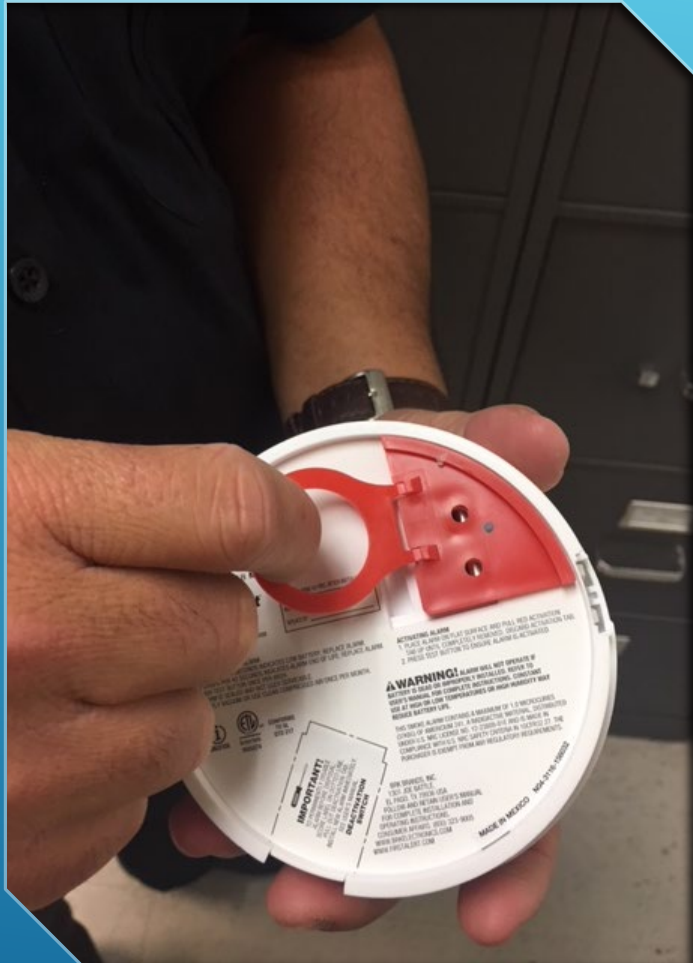

INSTALLATION

STEP 6


Turn the alarm upside down and pull out activation tab. You will need to pull the tab up and then pull out. This step starts the 10 year life span of the detector.

NOTE: There is also a place to write down the date of install on the back of the alarm. This will help to remember how old the detector is.

INSTALLATION

STEP 7

Test the smoke alarm. Press and hold the test button on the cover of the unit until the alarm sounds.(The unit may continue to alarm for a few seconds after you release the button). During testing, you will hear a loud, repeating horn pattern: 3 beeps, pause, 3 beeps, pause.

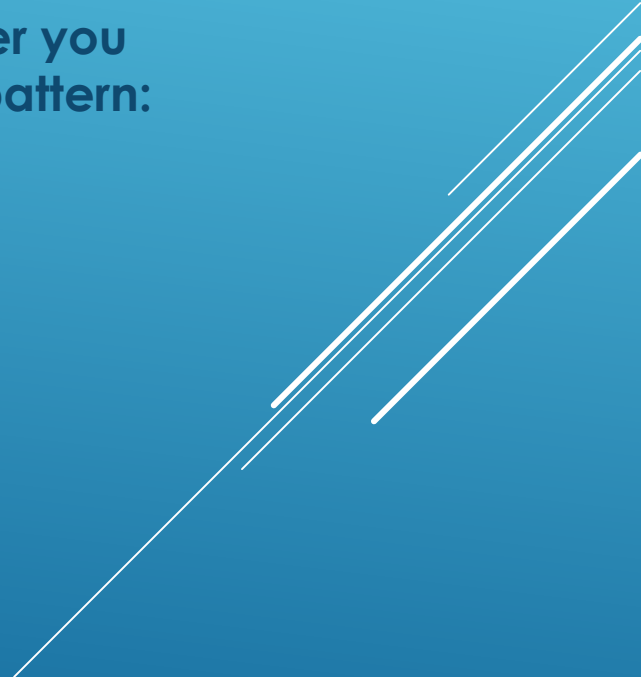A decorative graphic consisting of several parallel white lines of varying lengths, slanted diagonally from the bottom right towards the top right, located in the lower right quadrant of the page.




INSTALLATION

STEP 8

Push the unit toward the bracket, and turn it clockwise until you feel it snap into place.

Test the unit again. Press the test button until the horn begins sounding.

If you have any questions
please contact the Fire Marshal's office at
(325) 676-6434
Monday through Friday
8:00 am to 12:00 pm
1:00 pm to 5:00 pm

Decorative white lines consisting of several parallel diagonal strokes in the bottom right corner of the slide.